

PLEXTALK®

Quick Reference Plextalk PTN2 Mask –

This document describes the main functions needed to operate the player. The diagrams are labelled with numbers that are referred to in the text below.

1. Connecting Plextalk PTN2 to mains outlet

Insert the small round plug on the end of AC adaptor into back of the unit (1). Ensure the supplied power cable is connected to the AC adaptor firmly before plugging mains plug into a mains outlet.

2. Power On/Off

Press and hold the Power On/Off button (2) to turn on.
Press and hold the Power On/Off button (2) again to turn off.

3. Inserting playback media





Disc; Insert the disc into the CD slot (3) at front of the unit until the disc will be automatically taken into the unit.
SD card; Insert the SD card into the SD card slot (4) on the left side of the unit.
USB memory; Insert the USB memory into the USB slot (5) on the left side of the unit.

4. Removing playback media

Disc; Press the Eject key (6) to remove, the disc will be automatically ejected.
SD card; Push the SD card inwards, then the card should pop out.
USB memory; Pull out the USB memory from the unit.

5. Playback and stop

To start playback, press the Play/stop key (7).
To stop playback, press the Play/stop key (7) again.

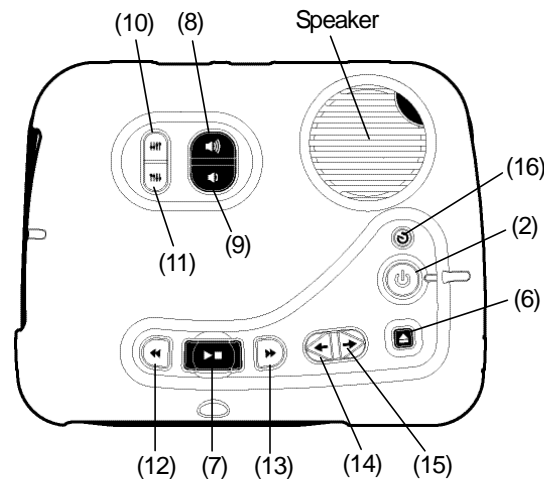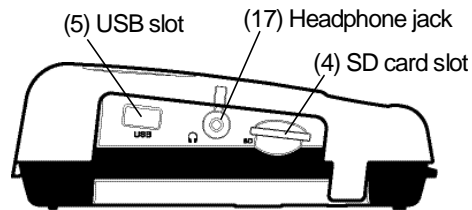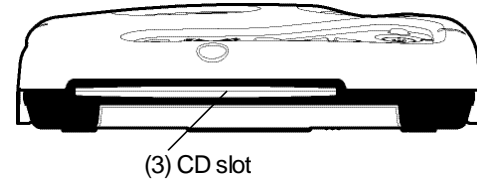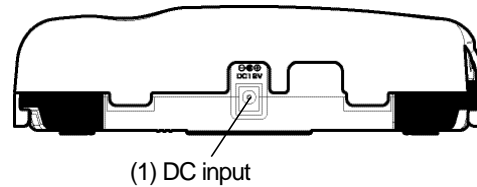

6. Adjusting volume and tone

Volume; Press the Volume up key (8) to increase, press the Volume down key (9) to decrease.

Tone; Press the Tone up key (10) to increase, press the Tone down key (11) to decrease.

7. Rewinding / Fast forward

Press and hold the Rewind key (12) to fast rewind.

Press and hold the Fast forward key (13) to fast forward.

8. Selecting media and title

Press the Previous title key (14) and Next title key (15) at the same time repeatedly until you reach the desired media. Then press the Previous title key (14) or Next title key (15) to select the title.

9. Setting sleep timer

Press the Sleep timer key (16) until you reach the desired setting.

10. Using headphones

Insert headphone connector into the Headphone jack (17).



SHINANO KENSHI CO.,LTD.
<http://www.plextalk.com/>

PLEXTALK®

Quick Reference Plectalk PTN2 –

This document describes the main functions needed to operate the player. The diagrams are labelled with numbers that are referred to in the text below.

1. Connecting Plectalk PTN2 to mains outlet

Insert the small round plug on the end of AC adaptor into back of the unit (1). Ensure the supplied power cable is connected to the AC adaptor firmly before plugging mains plug into a mains outlet.

2. Power On/Off, setting sleep timer

Press and hold the Power On/Off button (2). Press the sleep timer key (3) until you reach the desired setting.

3. Inserting playback media

Disc; Insert the disc into the CD slot (4) at front of the unit until the disc will be automatically taken into the unit.

SD card; Insert the SD card into the SD card slot (5) on the left side of the unit.

USB memory; Insert the USB memory into the USB slot (6) on the left side of the unit.

4. Removing playback media

Disc; Press the Eject key (7) to remove, the disc will be automatically ejected.

SD card; Push the SD card inwards, then the card should pop out.

USB memory; Pull out the USB memory from the unit.

5. Playback and stop

To start playback, press the Play/stop key (8).


To stop playback, press the Play/stop key (8) again.

6. Adjusting volume, speed and tone


Volume; Press the Volume up key (9) to increase, press the Volume down key (10) to decrease.

Speed; Press the Speed up key (11) to increase, press the Speed down key (12) to decrease.



Tone; Press the Tone up key (13) to increase, press the Tone down key (14) to decrease.

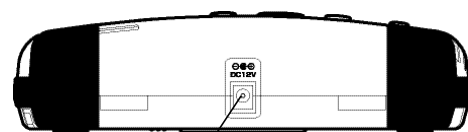

(1) DC input

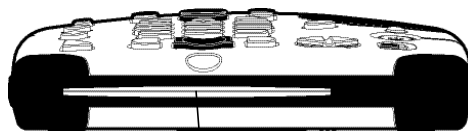

(4) CD slot

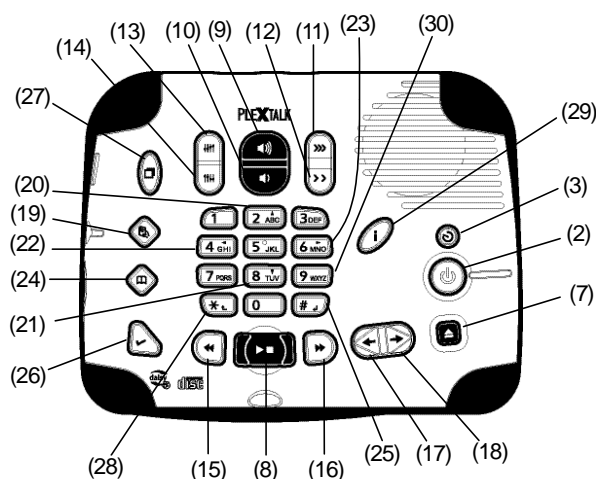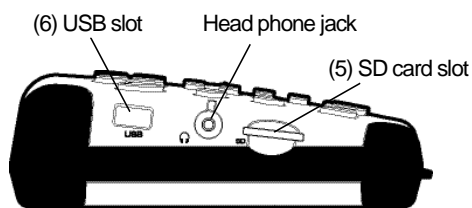

7. Rewinding / Fast forward

Press and hold the Rewind key (15) to fast rewind.

Press and hold the Fast Forward key (16) to fast forward.

8. Selecting media and title

Press the Previous title key (17) and Next title key (18) at the same time repeatedly until you reach the desired media. The bookshelf key (19) can also be used to change titles with one push. Then press the Previous title key (17) or Next title key (18) to select the desired title.

9. Moving by Level (bookmark)

Press the Number 2 key (20) or 8 key (21) to select the navigation level (bookmark), and press the Number 4 key (22) or 6 key (23) to move within the required level (bookmark).

10. Direct jump to page/heading

Page; Press the GoTo key (24) *once* and input the page number with the number key, then press the Enter key (25) to go to page.

Heading; Press the GoTo key (24) *twice* and input the heading number with the number key, then press the Enter key (25) to go to heading.

11. Direct jump to bookmark / Adding bookmark

Press the Bookmark key (26) *once* and input the bookmark number with the number key, then press the Enter key (25) to go to bookmark.

Press the Bookmark key (26) *twice* at the desired position and input the bookmark number with the number key, then press the Enter key (25) to add bookmark.

12. Selecting menu

Press the Menu key (27), and press the Number 4 key (22) or 6 key (23) to select the menu, then press the Enter key (25) to confirm or the Cancel key (28) to cancel.

13. Getting book information

Press the Information key (29) to get the book information.

14. Moving up title from a media to another media

Select the title you want to move at first. Press the Number 9 key (30) to access the move feature, and press the Number 4 key (22) or 6 key (23) to select target media, then press the Enter key (25) to confirm. Plectalk will ask you that you wish to proceed or not. Press the Enter key (24) again to proceed or the Cancel key (28) to abort.